


Operating Instructions

Models 14305, 17305

WARNING: Before operating dishwasher, read important safety instructions in the Automatic Dishwashing Guide.

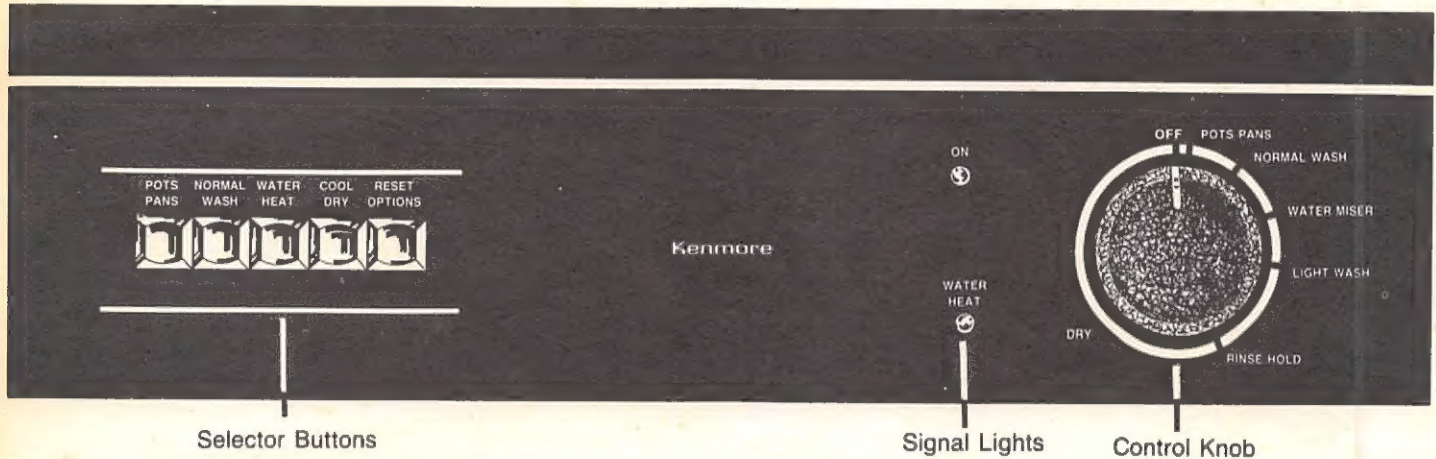

Starting Your Dishwasher

1. Load the dishwasher and add detergent (see your Automatic Dishwashing Guide).
2. Close the door but do not latch.
3. Push selector button for desired cycle. If you plan to use the RINSE HOLD or the LIGHT WASH cycle, push the NORMAL WASH button.
4. Push selector button for desired option.

5. Turn the control knob (clockwise) to the desired cycle.
6. Turn on the hot water faucet nearest the dishwasher to clear cool water from the water pipe.
7. Latch dishwasher door.

NOTE: The "ON" light glows while the dishwasher is operating. If the light doesn't come on when you latch the door, make sure the control knob has been advanced far enough.

Cycles

	<p>POTS PANS Cycle For heavily soiled dishes and pots and pans.</p> <p>Cycle Time: Approx. 83 minutes Water Usage: Approx. 15.0 gallons</p>	
	<p>NORMAL WASH Cycle For normally soiled dishes.</p> <p>Cycle Time: Approx. 75 minutes Water Usage: Approx. 12.5 gallons</p>	
	<p>WATER Miser Cycle Saves energy by using less hot water than Normal Wash.</p> <p>Cycle Time: Approx. 68 minutes Water Usage: Approx. 10.0 gallons</p>	
	<p>LIGHT WASH Cycle For prerinse or lightly soiled dishes and dishes that have been stored.</p> <p>Cycle Time: Approx. 62 minutes Water Usage: Approx. 7.5 gallons</p>	
	<p>RINSE HOLD Cycle For rinsing dishes that will be washed later. Do not use detergent. Use Cool Dry option.</p> <p>Cycle Time: Approx. 15 minutes Water Usage: Approx. 5.0 gallons</p>	

Options



WATER HEAT Option

When this option is selected, water in the dishwasher is automatically heated to the proper dishwashing temperature. **Cycle time will be extended while the water is heating.** Water action will continue during the heating period, and the Water Heat light will glow. Water Heat cannot be selected with Rinse Hold.



COOL DRY/HOT DRY Option

To save energy, press in for Cool Dry. For drier dishes, push Reset Options for Hot Dry. Note: If you wish to shorten drying time and save energy turn the control knob to "OFF" at the beginning of the dry cycle and open dishwasher door slightly.



RESET Options

Push Reset button to cancel Water Heat and Cool Dry options.

What Your Dishwasher Needs To Do Its Job

- Water temperature should be 140°F. (60°C.)
- Water pressure should be between 15 and 120 pounds per square inch.
- **Fresh** detergent for automatic dishwashers.
- Rinse agent dispenser filled.
- Proper connections to water and electricity.

- dishes shouldn't overlap.
- silverware should be loaded so pieces do not nest together or protrude through openings in the basket.
- dishes should not interfere with turning or extending parts of the spray system.
- dishware should be standing upright.
- items should be placed so water can drain freely.

Loading the Dishwasher

Proper loading contributes to good washing results. See your Automatic Dishwashing Guide for complete instructions and loading examples.

- Remove loose food from dishware.
- When loading dishware into the racks, remember the following:
 - place only dishwasher safe items in the racks.

How To Add a Dish During a Cycle

1. To be certain the added item is washed and rinsed, make sure there is a full wash cycle yet to be completed.
2. Unlatch the door to stop the cycle. Wait for the water action to stop.
3. Open the door and add the dish.
4. Close and latch the door. The cycle will resume automatically.

Detergent Dispenser

POTS PANS, NORMAL WASH, WATER Miser Cycles

Fill detergent cups 1 and 3. Rotate lid counterclockwise. Fill detergent cups 2 and 4. Cups 1 and 3 should be covered.

LIGHT WASH Cycle

Fill detergent cups 1 and 3. Rotate lid counterclockwise. Cups 1 and 3 should be covered.

